

MP630 MP3 Firmware Update Procedure


(Please make sure you backup all the data before continuing firmware update procedure.)

Notice:


- a. Before beginning the procedure, please disconnect your MP630 from your computer.
- b. This firmware update program only supports Win2000、WinXP and Vista.
(Please log in with Administrator privileges)
- c. This procedure **WILL** delete all the files in your mp3 player.
- d. Please **DO NOT** use any types of USB hubs, including USB ports on your monitor or keyboard.

Procedure:

1. Before beginning the procedure, please disconnect your MP630 from your computer. Press and hold the “Reset” button on MP630 for 2 seconds.
2. Press and hold the “Volume Down” button and connect MP630 to an available USB port on a computer.
3. Extract the file and then double click on the executable file to execute the “MP630: Firmware Upgrade” software program.

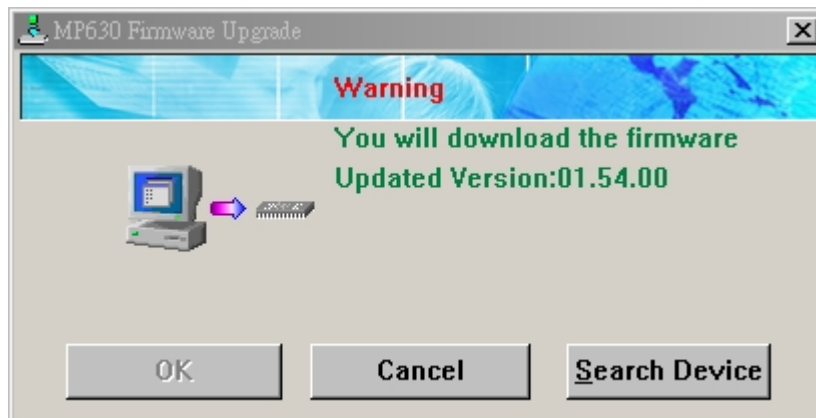

4. Click on the “Search Device” button to continue. A “Current Version:01.XX.XX” message will be displayed in the window indicating that the MP630 has been successfully found. You may release the “Volume Down” button now.

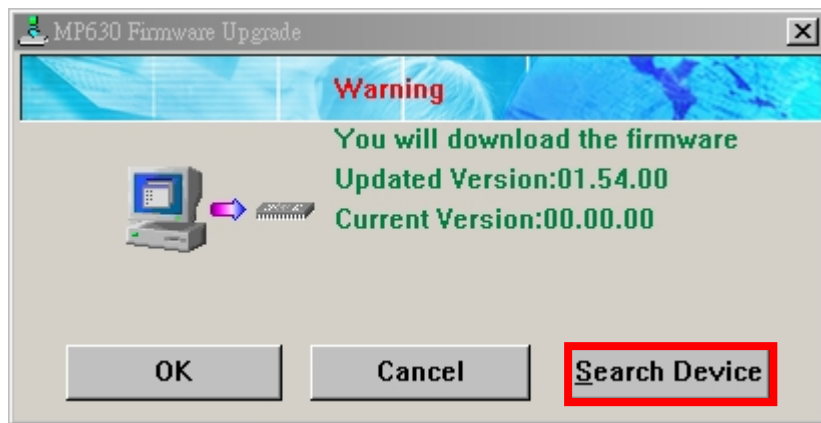

5. Click on the "OK" button to begin updating the firmware version of your **MP630**. This may take a few minutes. After the firmware update process completes, a "Firmware upgrade Completes..." message will appear. Please click on the "OK" button to close the "MP630: Firmware Upgrade" software program. Congratulations, your **MP630** is now updated.

